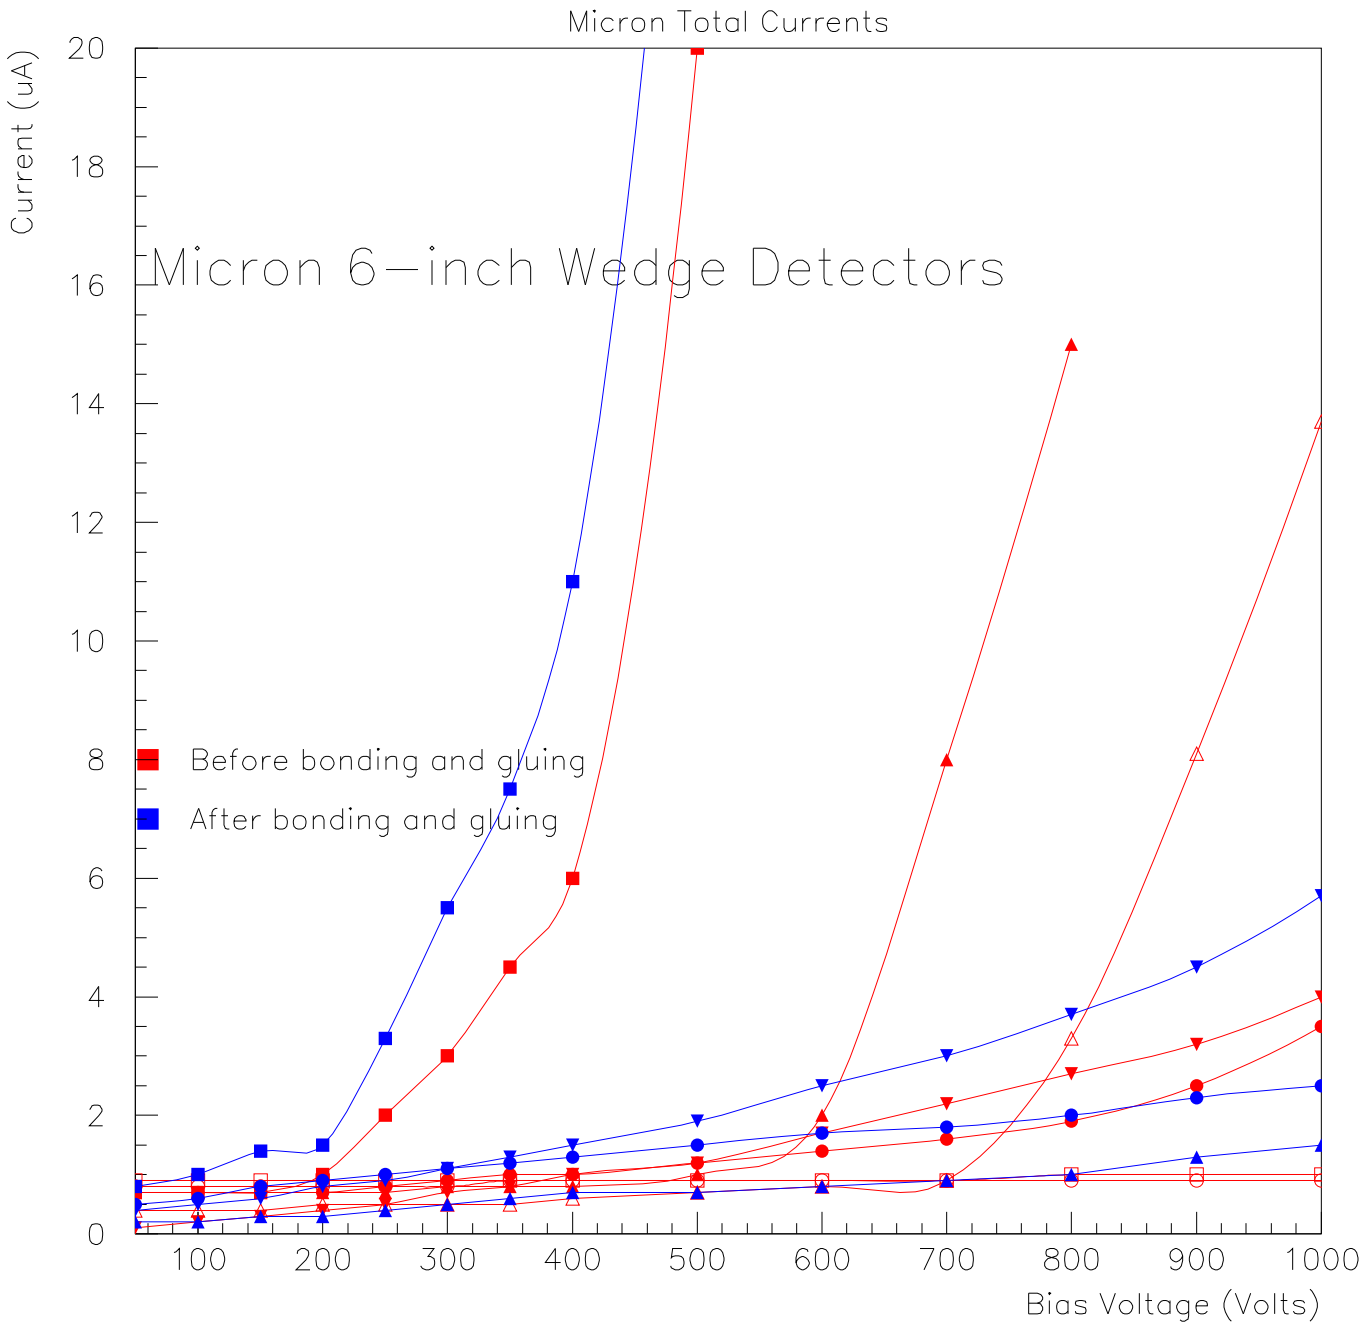
Micron Total Currents
Micron 6−inch Wedge Detectors
Current (uA)
Bias Voltage (Volts)
Before bonding and gluing
After bonding and gluing
0
2
4
6
8
10
12
14
16
18
20
100
200
300
400
500
600
700
800
900
1000