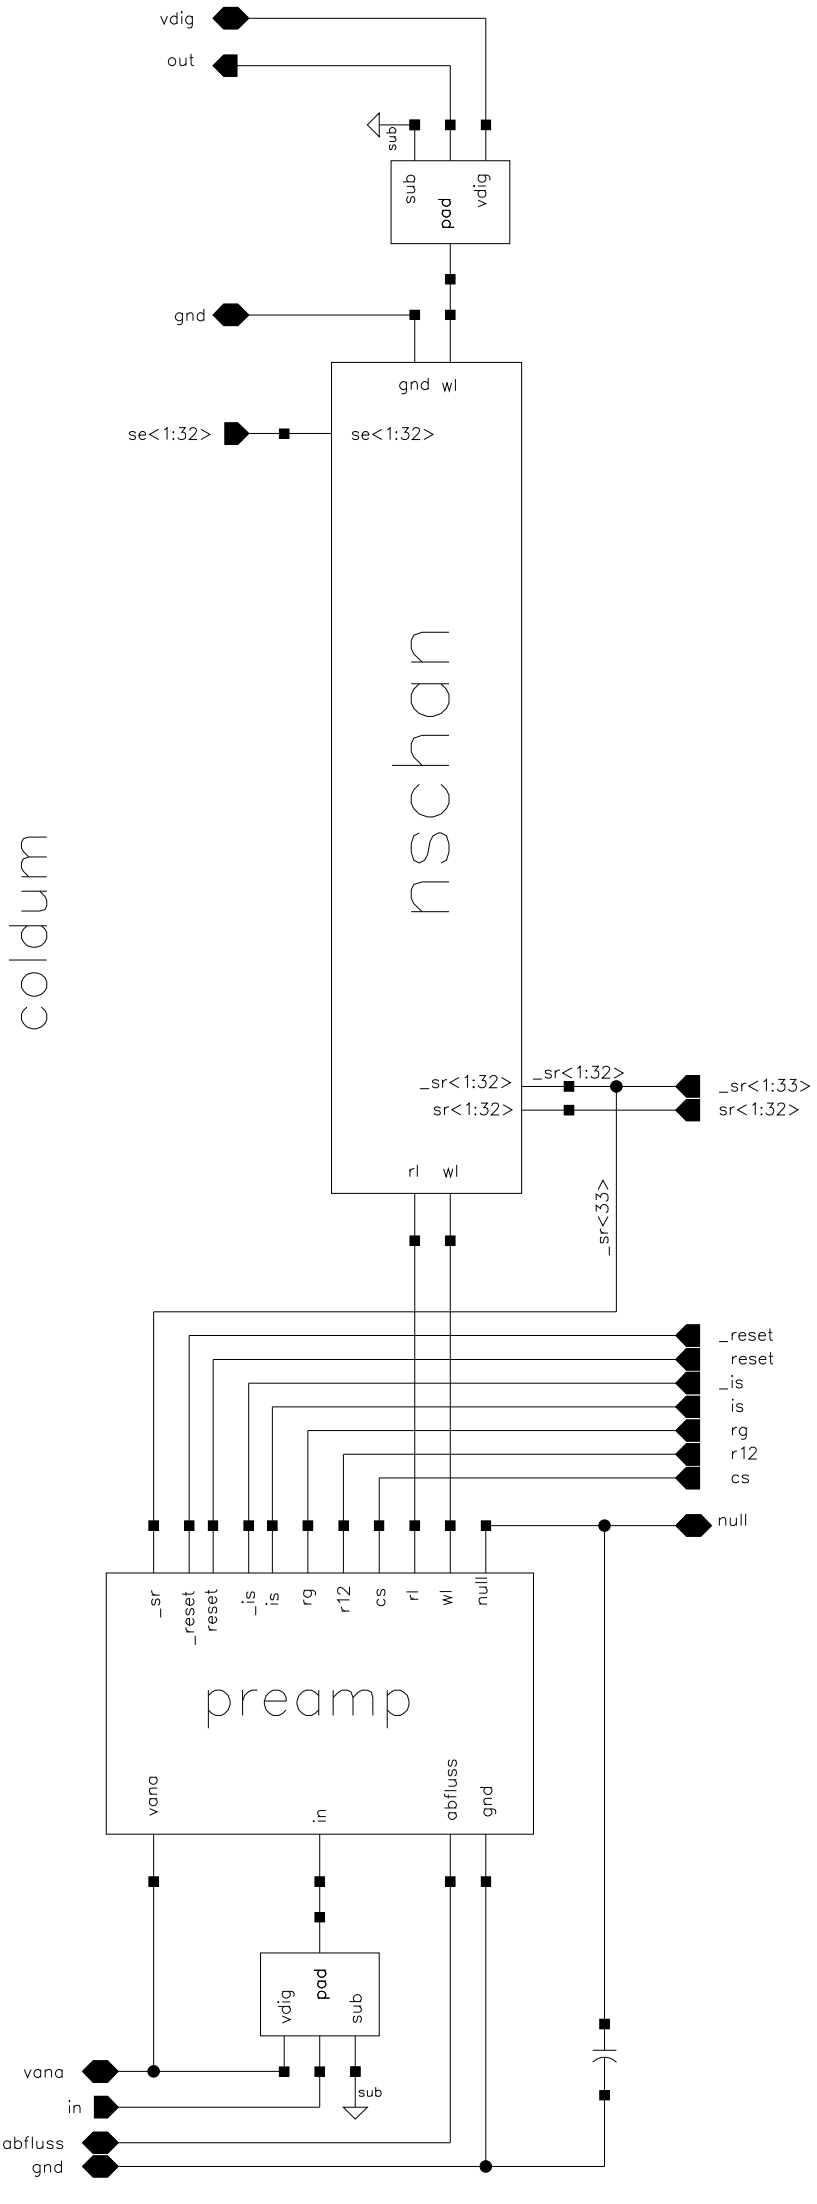
vdig
out
sub
sub
pad
vdig
gnd
gnd
wl
se<1:32>
se<1:32>
coldum
nschan
_sr<1:32>
_sr<1:32>
_sr<1:33>
sr<1:32>
sr<1:32>
rl
wl
_sr<33>
_reset
reset
_is
is
rg
r12
cs
null
_sr
_reset
reset
_is
is
rg
r12
cs
rl
wl
null
preamp
vana
in
abfluss
gnd
vdig
pad
sub
vana
in
abfluss
gnd
sub